

SPARE PARTS LIST

MODEL NO. 1911B

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	663857-6	POWER SUPPLY CORD 1.5-2-5.0	1	
002	682502-4	CORD GUARD 8-85 3707/N1923B	1	
003	687052-4	STRAIN RELIEF 4157KB/2414B/JR3LS1230/BO6040/190/GD0800C/2432		
004	911133-5	*PAN HD SCREW M4X18 10PK	2	
005	651252-2	DA SWITCH SGE215C	1	
006	645200-1	NOISE SUPPRESSOR LS0714/JR3060LC1230/RP1100C/3705/HM1810/307		
007	411423-1	HANDLE COVER 1911B	1	
008	911168-6	*PAN HD SCREW 4X40 W/CP 10PK WASHER	1	
009	911153-9	*PAN HEAD SCREW M4X28 10PK W. CAPTIVE WASHER	3	
010	853285-5	NAME PLATE 1911B	1	
011	953106-2	*RIVET 0-5 10PK	4	
012	643601-7	BRUSH HOLDER CB-16	2	
013	181410-1	CARBON BRUSH CB-106	1	
014	911188-0	*PAN HDSCREW M4X60 W/CP 5PK 1911B	1	
015	911113-1	*PAN HEAD SCREW M4X10 10PK W. CAPTIVE WASHERS LF1000		
016	410438-5	REAR COVER 1911B	1	
017	271226-3	KNOB 50 1911B	1	
018	941251-5	*FLAT WASHER 10 DIN125-B 5PK	1	
019	159652-5	MAIN FRAME 1911B	1	
021	231004-3	COMPRESSION SPRING 18 1125/23B	1	
022	421147-1	RUBBER PACKING 1911B	1	
023	312951-8	FRONT BASE 1911B	1	
024	911226-8	*PAN HD SCREW 5X18 W/SP 10PK WASHER	6	
025	312952-6	REAR BASE 1911B	1	
026	411428-1	BAFFLE PLATE 1911B	1	
027	263014-2	RUBBER PIN 4 SR2600/N1923BD/HR	1	
028	211031-6	BALL BEARING 608LLB (608VV) 67LF1000	1	
029	263002-9	RUBBER PIN 4/9402/HR160DWH/903HM1202C/BO3700	1	
030	599023-8	FIELD 110V 1911B	1	115V
031	911295-9	*PAN HD SCREW M5X70 5PK W. SPRING WASHER 5014NB	2	
032	681613-2	INSULATION WASHER 806 HR1800	1	
033	516081-9	ARMATURE 110V 1911B INC. 28,32,34,35,36	1	115V
034	241519-2	FAN 68	1	
035	213051-6	DUST SEAL 6210-10	1	
036	211066-7	BALL BEARING 6200LLB/9402	1	
037	152362-3	BRACKET 1911B INC. 29,49	1	
038	911158-9	*PAN HEAD SCREW 4X30 W/CP 10PKWASHER	6	
039	222050-7	V-PULLEY 4-24L 1125	1	
040	225069-5	POLY V-BELT 1911B	1	
041	411426-5	BELT COVER 1911B	1	
042	911123-8	*PAN HEAD SCREW M4X14 10PK W. CAPTIVE WASHERS	1	
043	222063-8	V-PULLEY 4-38 1911B	1	
044	211062-5	BALL BEARING 6000ZZCM/2A 1901/	1	
045	341389-0	WASHER 10 1911B	1	
046	161119-1	DRUM/NEW 1911B	1	
047	341377-7	WASHER 12 1805B/06B	1	
048	211107-9	BALL BEARING 6201ZZ	1	
049	263005-3	RUBBER PIN 6 2414B&NB/LS800DWB	1	
050	263002-9	RUBBER PIN 4/9402/HR160DWH/903HM1202C/BO3700	1	
051	345157-3	BLADE HOLDER 1911B	2	
052	911106-8	*PAN HD SCREW M4X8 10PK W. SPRING WASHER	4	
053	344442-1	DRUM PLATE (2PCS/SET)	1	
054	251609-3	*HEX HEAD M6X17 10PK W. COLLAR SCREW	8	
055	232065-6	LEAF SPRING	2	
056	321346-4	PIN	2	
057	961017-7	*EXT E-RING JIS JE-3 10PK	1	
058	321347-2	STOPPER PIN	1	
059	231303-3	COMPRESSION SPRING 5	1	
060	256714-1	NLA PIN 2 1911B	1	

SPARE PARTS LIST

MODEL NO. 1911B

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
061	252415-9	NUT N4-12	1	
062	410329-0	SUB CHIP COVER 1911B	1	
063	911153-9	*PAN HEAD SCREW M4X28 10PK W. CAPTIVE WASHER	1	
064	341601-8	ADJUST PLATE 1911B	2	
065	251246-3	*PAN HEAD SCREW W.WASHER 10PK M4X5	4	
066	267012-8	FLAT WASHER 1911B	2	
400	123055-9	SHARPENING HOLDER ASSY 1911B	1	
404	123062-2	BLADE GAUGE ASSY 1125/1901	1	
405	782209-3	SOCKET WRENCH 9 1125 5000SB	1	
406	793008-8	HSS PLANER BLADE 110 1911B	1	
914	819063-3	MAKITA LABEL 500 4305/HR160DW 6313DW/6704D/05D/HR2432	1	

SERVICE DRAWING

MODEL NO. 1911B

